



Pos.	Artikelbeschreibung	Description of item	Artikel Nr./Item No.
1	Abdeckblech	Top cover	E010184001
2	Mikroschalter	Micro switch	E0101933158
3	Mikroschalterhalterung	Micro switch seat	E010184603
4	Gehäuse	Housing	E010184604
5	Bodenplatte	Base plate	E010184019
6	Fuß - Set, 4 Stück	Base - set, 4 pieces	E010184020
7	Rückwand	Back cover	E010184607
D	Anschlag für Schüsselabdeckung	Stop for bowl cover	E0101846D
E	Schaber kpl.	Scraper, complete	E0101840E
14	Motor	Motor (single phase single speed)	E010184033
H	Antriebswelle kpl	Drive shaft, complete	E0101846H
18	Getriebe	Reduction Gearbox	E010184037
G	Halterung Getriebe	Gearbox mount	E0101840G
40	Obere Kette	Upper chain	E010184081
I	Obere Spannrolle kpl.	Upper tension roller, complete	E0101842I
49	Untere Kette	Lower chain	E010184082
J	Untere Spannrolle kpl.	Lower tension roller, complete	E0101840J
K	Knethakenwelle kpl.	Mixing hook shaft complete	E0101840K
71	Rührhaken	Mixing hook	E0101840104
L	Schüsselwelle kpl.	Bowl shaft, complete	E0101846L
85	Schüssel	Bowl	E0101840121
86	Schüsselabdeckung	Bowl cover	E0101840122
M	Welle für Schüsselabdeckung kpl.	Shaft for bowl cover complete	E0101840M
R	Flache Seitenplatte, komplett	Flat side plate, complete	E0101846R
95	Bedienfeld	Control Panel	E0101840137
96	Timer	Timer	E0101840138
97	Schalter	Switch	E0101840139
98	Start-Taste	Start Button	E0101840140
99	Stopp-Taste	Stop Button	E0101840141
100	Schaltschütz	Ac contactor	E0101840142
101	Elektrokasten	Electrical box	E0101846101
102	Zugentlastung	Power cord lock	E0101840144
103	Überlastungsschutz	Overload Protector	E0101840145
Zubehör	Lenkrollen-Set Easy TKM	Wheel set Easy TKM	101844

