



Pos.	Artikelbeschreibung	Description of item	Artikel Nr./Item No.
1	Abdeckblech	Top cover	E010184101
2	Mikroschalter	Micro switch	E0101933158
3	Mikroschalterhalterung	Micro switch seat	E010184603
4	Gehäuse	Housing	E010184704
5	Bodenplatte	Base plate	E010184119
6	Fuß - Set, 4 Stück	Base - set, 4 pieces	E010184020
7	Rückwand	Back cover	E010184707
D	Anschlag für Schüsselabdeckung	Stop for bowl cover	E0101846D
E	Schaber kpl.	Scraper, complete	E0101841E
14	Motor	Motor (single phase single speed)	E010184133
H	Antriebswelle kpl	Drive shaft, complete	E0101847H
18	Getriebe	Reduction Gearbox	E010184137
G	Halterung Getriebe	Gearbox mount	E0101841G
41	Obere Kette	Upper chain	E010184182
I	Obere Spannrolle kpl.	Upper tension roller, complete	E0101842I
50	Untere Kette	Lower chain	E010184183
J	Untere Spannrolle kpl.	Lower tension roller, complete	E0101840J
K	Knethakenwelle kpl.	Mixing hook shaft complete	E0101841K
73	Rührhaken	Mixing hook	E0101841106
L	Schüsselwelle kpl.	Bowl shaft, complete	E0101847L
87	Schüssel	Bowl	E0101841123
88	Schüsselabdeckung	Bowl cover	E0101841124
M	Welle für Schüsselabdeckung kpl.	Shaft for bowl cover complete	E0101841M
R	Flache Seitenplatte, komplett	Flat side plate, complete	E0101847R
97	Bedienfeld	Control Panel	E0101840137
98	Timer	Timer	E0101840138
99	Schalter	Switch	E0101840139
100	Start-Taste	Start Button	E0101840140
101	Stopp-Taste	Stop Button	E0101840141
102	Schaltschütz	Ac contactor	E0101840142
103	Elektrokasten	Electrical box	E0101840143
104	Zugentlastung	Power cord lock	E0101840144
105	Überlastungsschutz	Overload Protector	E0101840145
Zubehör	Lenkrollen-Set Easy TKM	Wheel set Easy TKM	101844

